



**Disappearing Screens** 

Roll-Away<sup>®</sup>
Series 6000
Inside Mount Door

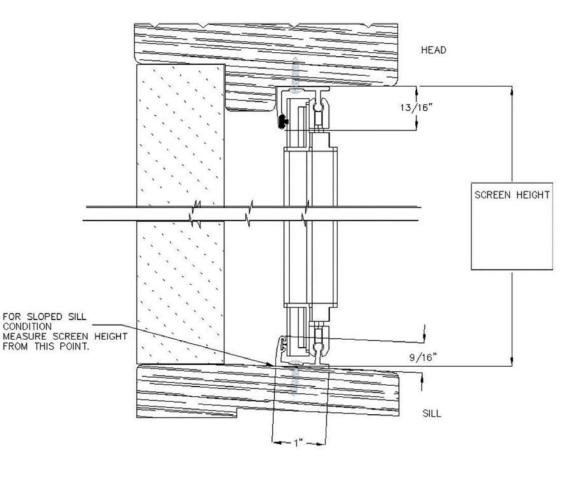

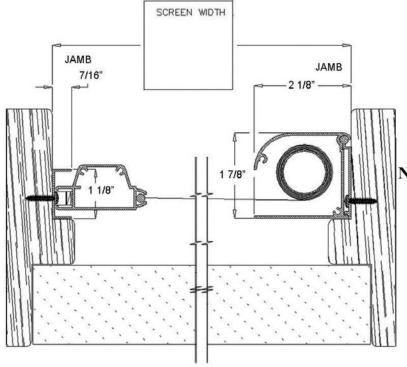

The dimensions for an
Inside Mount Roll-Away® Door
are derived from the details
at left (WIDTH) & above (HEIGHT).
For a single Roll-Away measure height on
left and right sides. For a double french
Roll-Away measure the middle height as well.
Note the smaller measurement of opening height.
We recommend that you deduct 1/8"
from your width and height measurements.
Measuring by these dimensions will
provide a door that will fit your opening.